

AUGUSTUS MOD C INSTALLATION INSTRUCTIONS WARNING: READ CAREFULLY BEFORE INSTALLING FIXTURE. PLEASE KEEP THIS MANUAL FOR FUTURE USE.

SAFETY INSTRUCTIONS

Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety.

This product must be installed in accordance with the application code by a person familiar with the construction and operation of the product and the hazards involved. Make certain power is off before installing or maintaining fixture. Check that voltage is compatible with fixture driver. Use approved connectors for all electrical connections

MAINTENANCE CAUTION

- 1. Review the wire connection before beginning installation and make sure fixture is grounded properly
- 2. For lighting controls, follow control instructions carefully.
- 3. Turn power off and wait for fixture to cool before performing maintenance
- 4. Maintenance must be done by qualified professionals.

WIRING CONNECTION

Universal voltage driver permits operation at 120VAC thru 347VAC, 50 or 60Hz.



Accessory Pack for 7 Pin

Shorting Cap x1

Note if fixture is furnished with photocell receptacle, please make sure install the photocell or shorting cap Accessory Pack for Photocell



Accessory Pack





WARNING


- 1. Risk of injury or damage. Make certain power is OFF before installing or maintaining fixture
- 2. If fixture is furnished with photocell receptacle, please make sure install the photocell or shorting cap


POLE MOUNT


- 1. Take the luminaire body, acorn shade and accessory kits from the carton.
- 2. Follow the steps below to assemble the lamp body.
- 3. Make wire connection with supplied wire nuts and make waterproof treatment by others in a tenon or pole as per "Electrical Connections"
- 4. Slip the fixture onto a tenon or pole with diameter of 2 3/8" and rotate the fixture to desired orientation. Tighten all set screws

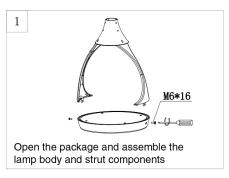


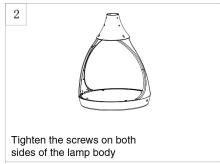

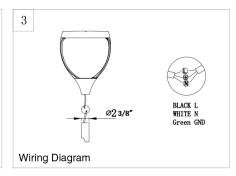

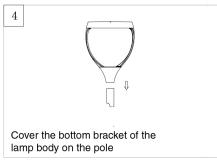

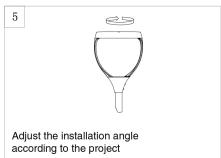

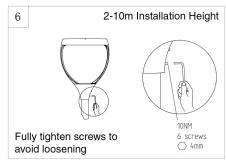

WATTAGE AND CCT SETTING

Factory Wattage Default Setting: The default is the maximum wattage Factory CCT Default Setting: 4000K.

Wattages and CCT can be set as required by selecting the combination on the DIP switches in the pole.

- 1. Remove screw plug from luminaires.
- 2. Select desired wattage or CCT by the DIP switches.
- 3. After adjustment, tighten the plug (remember) to avoid IP waterproof failure.

